



REK-O-KUT LOW NOISE STEREO PHONO / AUX SWITCH

The Low Noise Switch can be used to switch either of two phono turntables to the phono input of a hi-fi amplifier. It can also be used to add two Aux inputs to an amplifier that has only one such input. Thus, it can be used whenever one input needs to be expanded to two, or visa-versa.

Connections

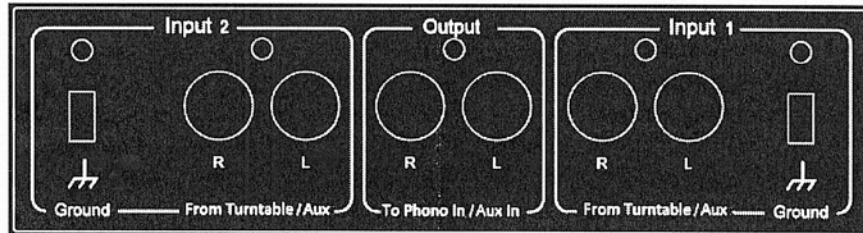

- 1) Connect turntable (or Aux/high level) outputs to *Inputs 1 & 2*.
- 2) Connect *Output* to phono preamp (or Aux/high level) input.
- 3) Connect ground wires from turntables to switch, and from switch to preamplifier. (not needed for Aux)

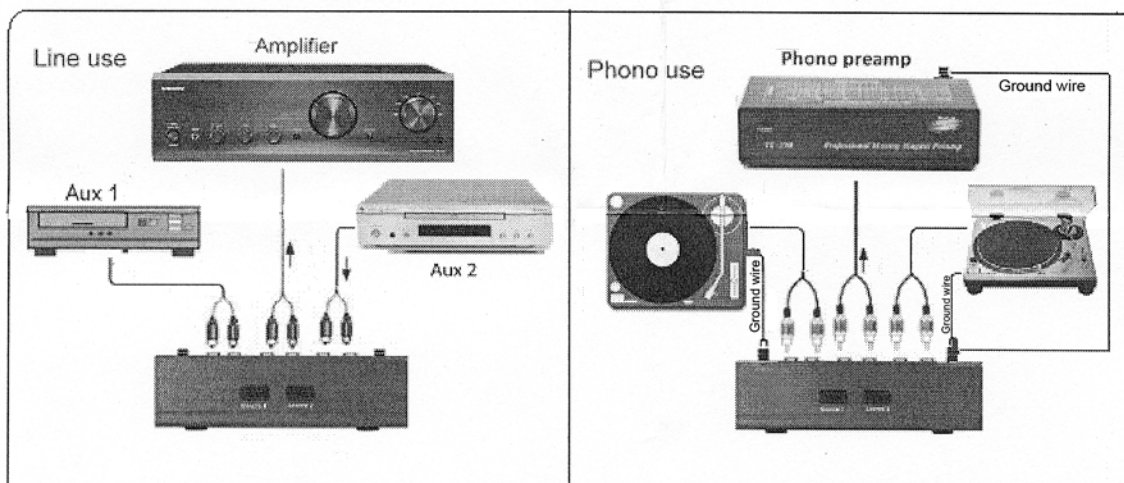

For Phono Use:

Connect the Low Noise Switch output to a phono preamp input, or to the phono input on your receiver. Connect both turntable ground wires to the switch's ground terminals using a suitable length of any gauge wire. Also connect a similar wire from the switch to your preamp or receiver's ground terminal.

For Line Use:

Connect the Low Noise Switch output to the AUX, CD or other line level input on your amplifier or receiver. The ground terminal connection is not needed for line use and can be left unconnected.

ESOTERIC SOUND
1608 Hemstock Ave.
Wheaton, IL 60189
(630)-933-9801
www.esotericsound.com