

ATLP120XUSB-16 MANUAL ADDENDUM

Manuals are not supplied by AT. They refer you to their website. The usage of the greater capacity arm for 16 inch discs is greatly different than the standard arm supplied for 12 inch discs. The manual is accurate in all areas except for these items:

PAGE NUMBER	CHANGE
5	Ignore items 5 & 6
7	Ignore Setting the anti-skate adjustment
10	Change to: "If desired, plug...on the record." to "For 12 inch and smaller disc you can, plug...on the record."
10	Playing a record, ignore item 2 & 3.
11	<u>Change "Playing a record to:</u> Use your fingers to lift the headshell, move the tonearm over the desired location on the record, and then place the headshell down to begin playing the record. Do not subject the product to strong impact during playback
11	<u>Add to Checking and Adjusting Pitch:</u> 4. To adjust speeds from 66 to 90 RPM, select 16% pitch and use speed markings on right side.
16	Refer to our published specifications.

ATLP120XUSB-16 QUICK START ADDENDUM

The 4 page instructions are accurate in all areas with the exception of some items:

PAGE HEADING	CHANGE
CONTENTS	OK AS-IS
PREPARATION	IGNORE ITEM 7
CONNECTION	OK AS-IS
PLAY	IGNORE ITEM 3 WHEN PLAYING 16 INCH DISCS, IGNORE ITEMS 6 & 8 FOR ALL DISCS
STOP	IGNORE ITEM
STYLUS REPLACEMENT	IF SUPPLIED WITH AN AT3600 CARTRIDGE, SEE BELOW.

To remove old stylus (needle), hold the cartridge in one hand, grasp the plastic stylus housing with thumb and forefinger, and pull away from the cartridge. The stylus assembly comes away at a slight angle, as indicated by the arrow.

To install replacement stylus, insert the new stylus assembly into the cartridge at a slight angle, so the hook at the end of the stylus fits into the slot in the cartridge body. The stylus assembly should click into place when fully seated on the cartridge. The stylus must be fully seated on the body for proper operation. Interchangeable stylus models:

